



N16Pro Disassembly and assembly of fingerprint cable


Please remove the bottom cover and internal battery screws first, and then remove the battery;

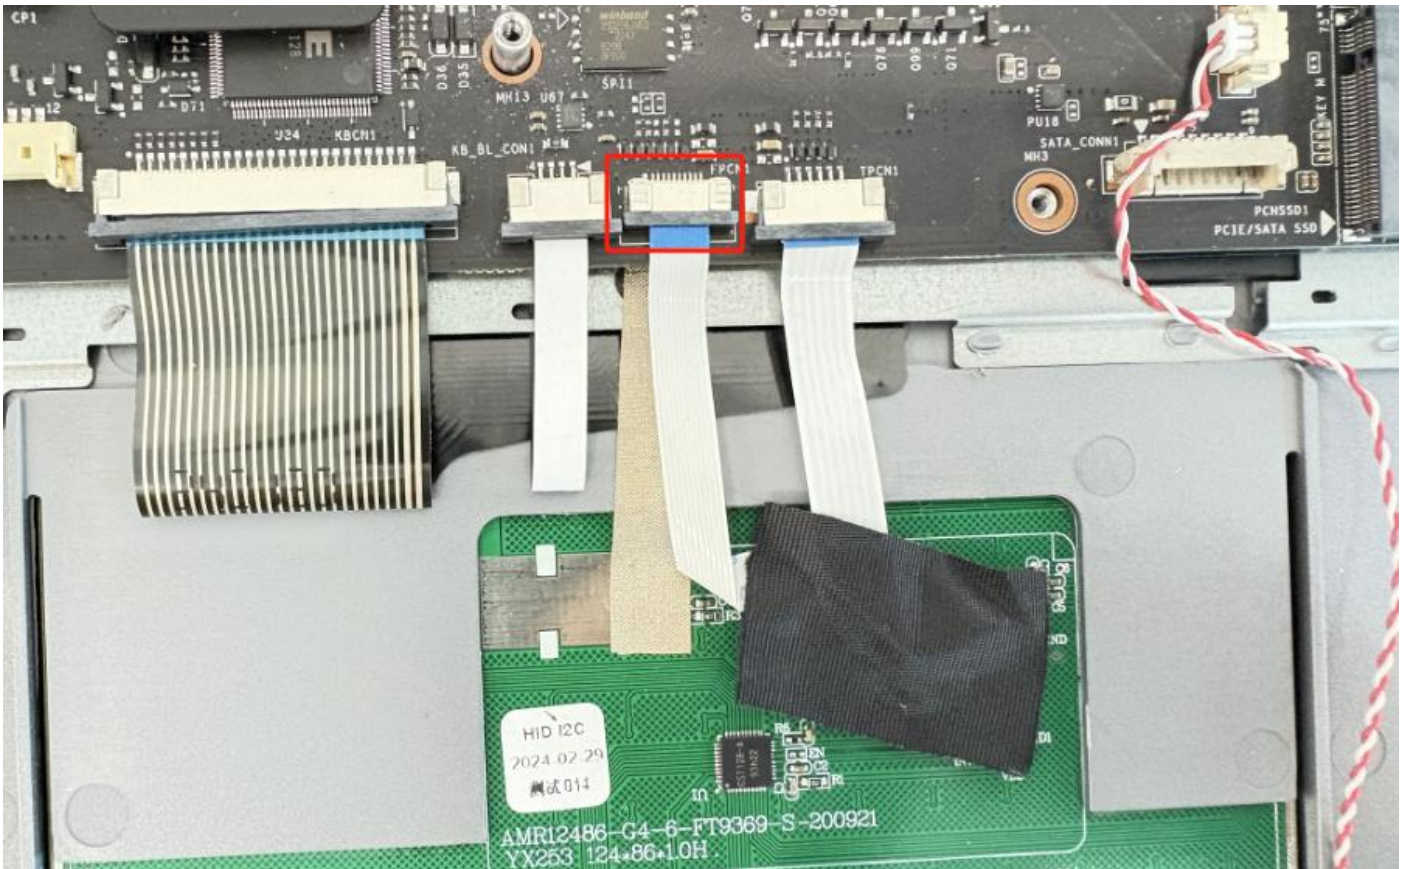


The fingerprint plug is shown in the above figure

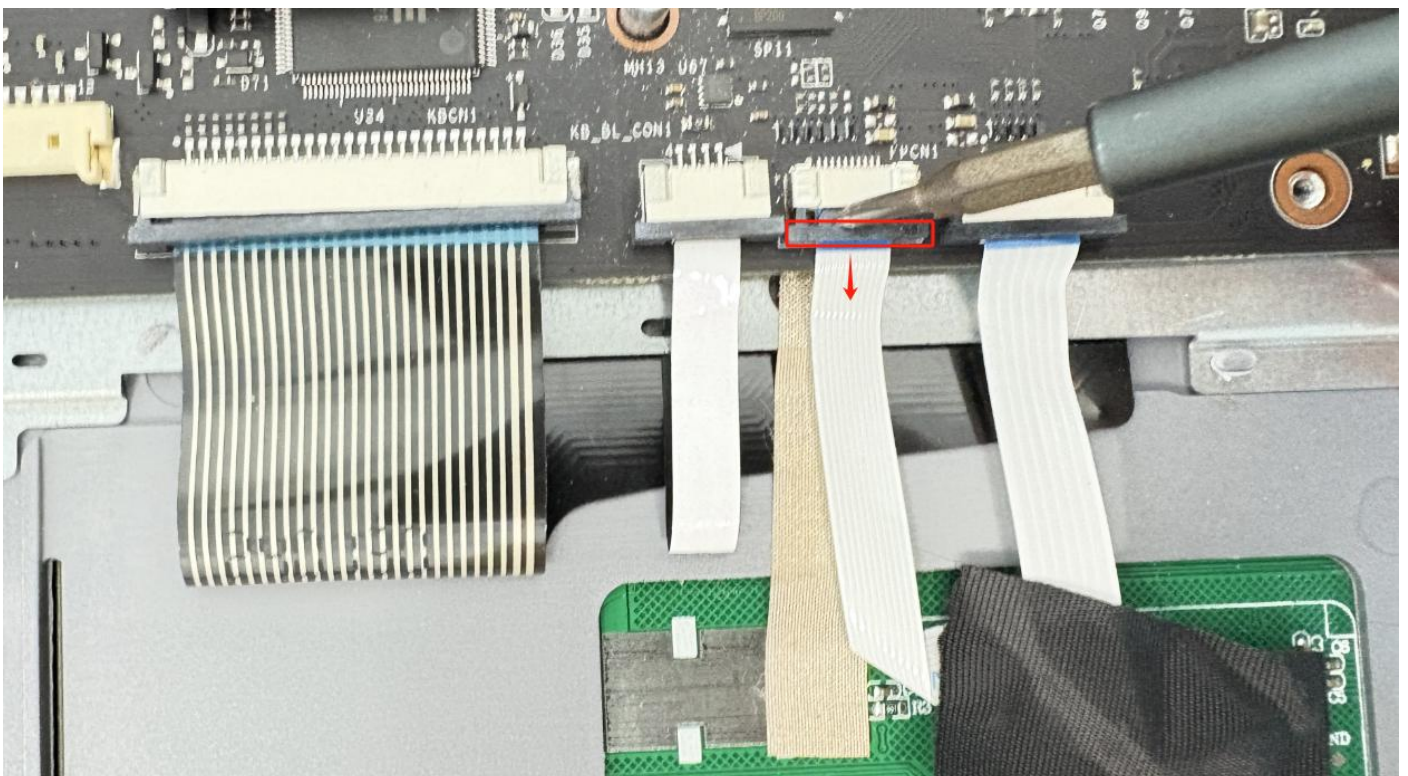

Pull the black buckle outward

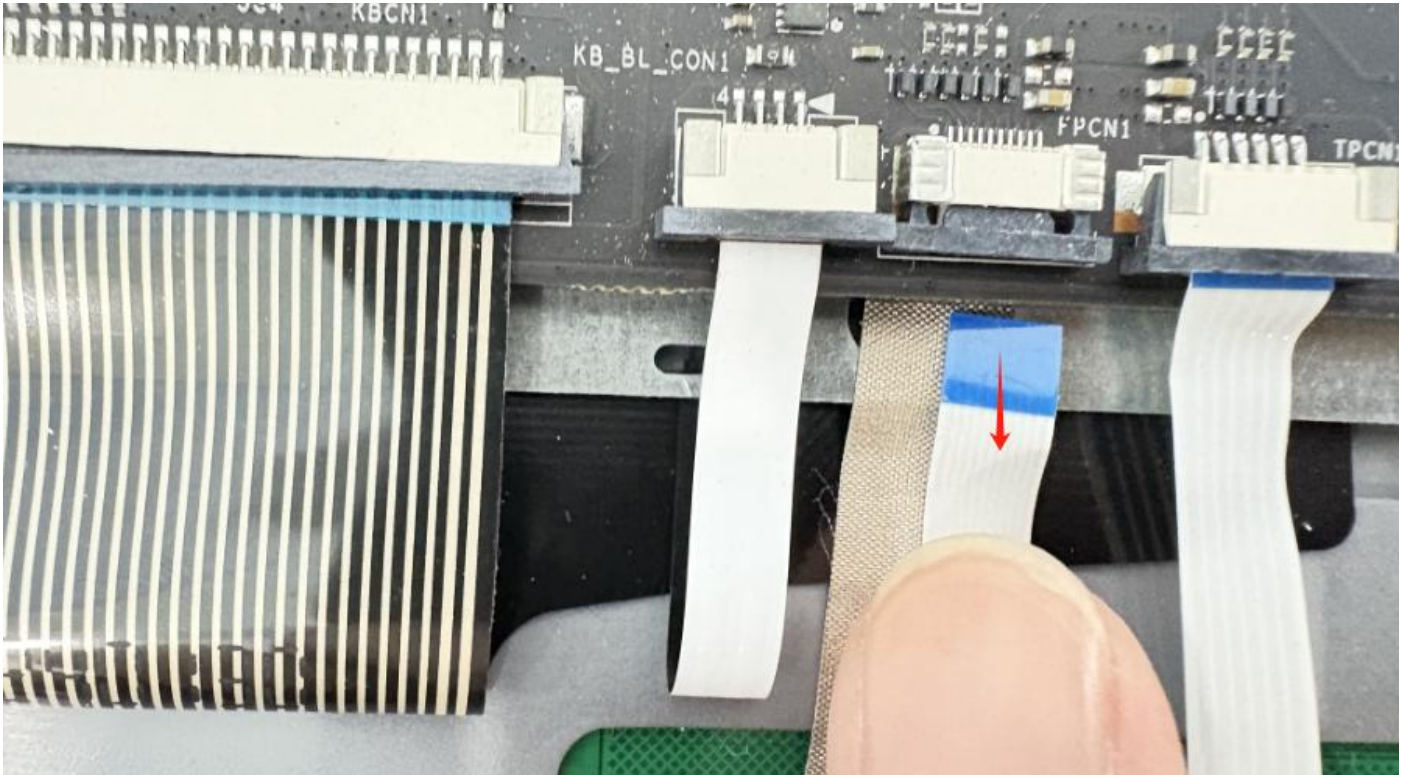

Gently pull out the fingerprint cable

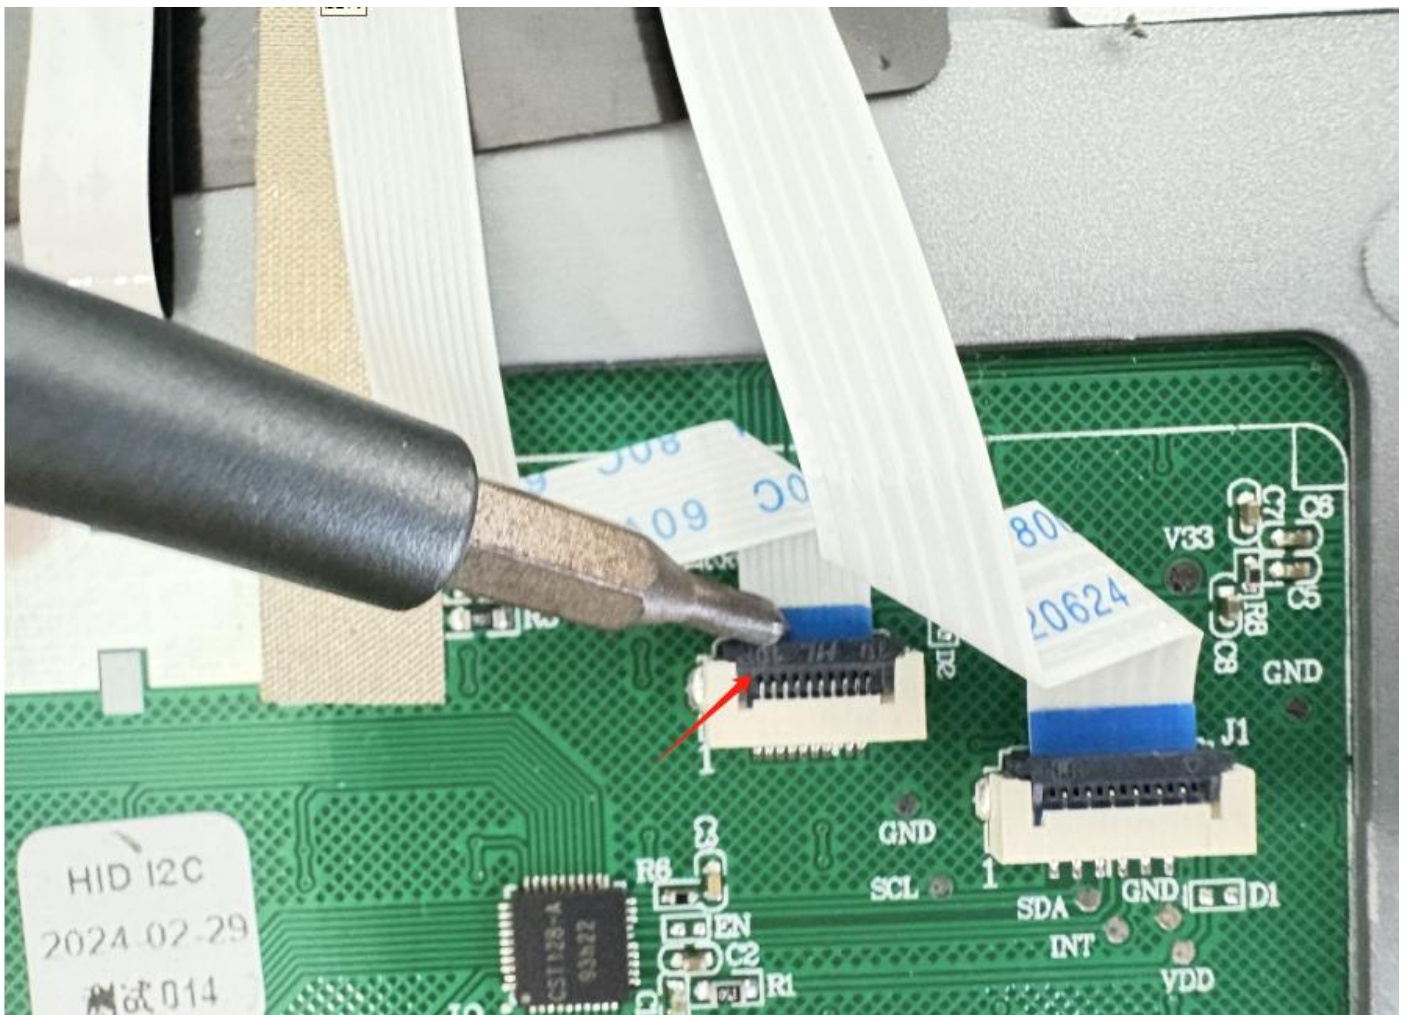

The other end of the fingerprint cable needs to be removed using a different method, which requires pulling the black buckle upwards



Then pull out the fingerprint cable

Finally, please reinstall the fingerprint cable and push in or press down the buckle; Reinstall the battery screws and battery cables, and install the bottom cover;